Krüger

ALTO R
USER MANUAL

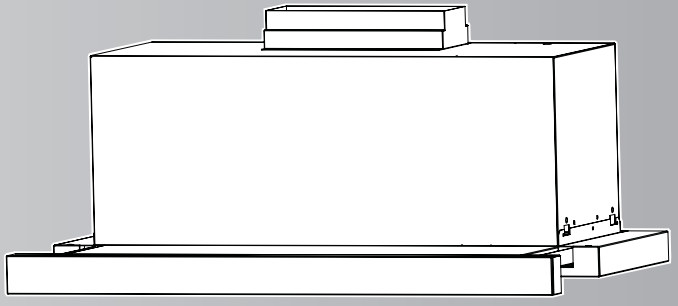

MODEL KR-300 Alto-R

Intertek
XXXXXXX

Recyclable

Carefully read this user instruction manual before installation

Introduction

Congratulations on your purchase of our ALTO - R range hood. It is designed with numerous helpful features to make cooking in your kitchen easier and enjoyable.

Please read the attached documents carefully before installing and/or using the range hood. This document includes important information such as installation, usage safety and directions.

Keep this document somewhere easily accessible. In the unlikely event that there is a mechanical failure or other malfunctions, please refer to this document for troubleshooting, warranty, and contact information.

Specifications

ALTO R

KR-300

Power Supply:110V ~ 60Hz

Rating:140 watts Light:Halogen 2 x 20 watts

Accuracy and details of the illustration and description may vary from the actual product.

Keep this manual in a handy place for future reference. This booklet contains important information and details regarding safe and proper usage of this range hood.

Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please recycle this product responsibly to promote sustainable reuse of material resources.

To dispose of your used range hood, please contact your local retailer or dealership for more information.

Table of Content

Basic Information

Handling Precautions 1
Warnings 1

Parts List

Packing List 2
Parts Checklist 2

Operation

Controls 3

Installation

Recommended Height 4

Troubleshooting

Frequently Asked Questions 5

Maintenance

Cleaning 6
Replacing Light Bulbs 7

Handling Precautions

- This product is designed for residentail use only.
- Maintenance must be performed by trained, qualified professional technicians. Your factory warranty may become void if the unit has been tampered with.
- In the unlikely event that there is a malfunction, please unplug the unit and contact your local customer service center or dealer immediately.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge of using electrical appliances.
- Children should be supervised when near any electrical appliances.
- Do not leave the unit running without supervision.
- Ensure that all light bulbs, fixtures, oil filters, and other parts attached to the unit are correctly fastened before turning the unit on.
- Do not put in or pull out the plug of the power supply without proper grounding
- Before installation, ensure that your household power system can satisfy the normal electrical load capacity of this unit.
- Do not replace the fuse of this unit for a higher powered fuse.
- All packing material are recyclable. Please dispose of them using proper recycling techniques.

Warnings

- Adequate ventilation is always required when there is an open flame in-doors.
- Do not check any moving or removable parts of the unit when the it is operating.
- Do not touch the underside of the range hood for up to half an hour after cooking. It can be extremely hot, and may burn your hand.
- Do not flambé under the cooker hood.
- When frying food, always supervise closely as the heated oil may become a fire hazard.
- Disconnect the electrical plug prior to performing any service or maintenance.
- Do not connect the unit directly to the power grid without using a socket.
- The exhaust must be discharged into a duct that is used for removing fumes from a gas burning stove.
- Other safety regulations of your local area must be fulfilled.

Packing List

Parts	Quantity
Main Body	1
User Instruction Manual	1
Aluminum Filter	2
M4 x 10 Screws	6
Exhaust Duct Adaptor	1
L Support Bracket	4
Butterfly Nut	4

Parts Checklist

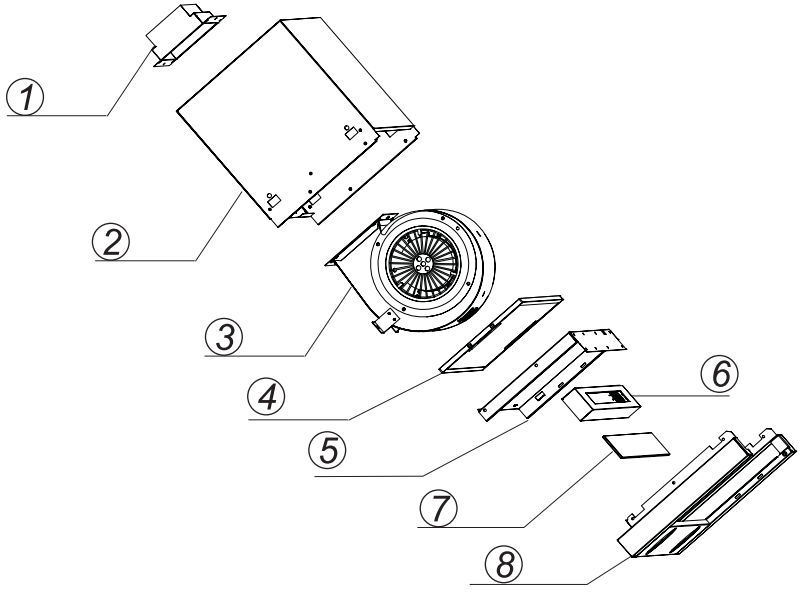

1. Adaptor
2. Bellows
3. Air duct assembly
4. Filter assembly
5. Pulling Plate
6. Handle
7. Glass
8. Lamp Plate

Controls

You will find this capacitive touch button cluster at the front of your range hood.



1 **Maximum Power**
The highest possible setting for the range hood unit. Ideal for high heat frying.
Press once to turn on, press again to turn off.

2 **Medium Power**
Medium setting that provides adequate ventilation for most day to day cooking.
Press once to turn on, press again to turn off.

3 **Lowest Power**
The lowest possible power setting. Ideal for simmering.
Press once to turn on, press again to turn off.

4 **Lighting**
Press once to turn on, press again to turn off.

5 **Auto Time-delay Off**
This option keeps the unit operating for a 60 second period at its current speed setting and then it will turn itself off.

Installation Details

- Install the unit at a dry location, without direct sunlight.
- There should be adequate mounting surface under the cabinet to ensure its stability.
- The range hood will need to be mounted right above the stove.
- The range hood need to be mounted between 25.6" (650mm) to 29.5" (750mm) above the stove's heading elements and burners
- This range hood requires proper grounding. Do not install this unit without properly grounding the unit first.

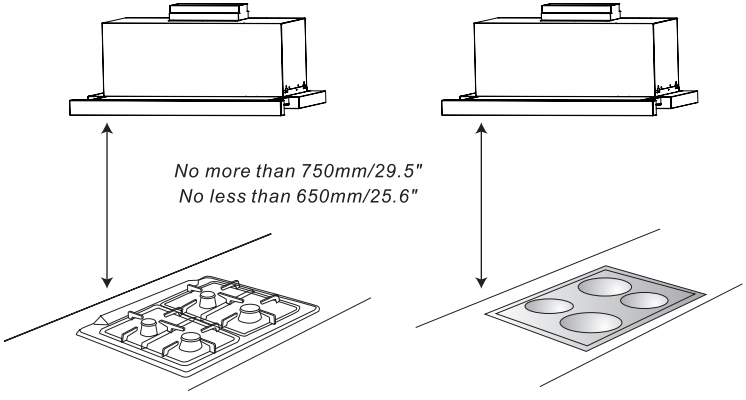

FAQ

Before you assume the worst, check this simple fault-finding guide to get to the root of the problem:

Light bulb doesn't come on	*A replacement is probably necessary, but check first that the bulb is firmly screwed in to its holder. If the Filament is broken, remember that the light bulbs are not covered by our guarantee. Remember to disconnect the mains electricity supply before removing the bulbs*
Motor is on but no air is being sucked up	*Switch off immediately and check that the setting lever Is set to the appropriate mode for your application.*
Motor is on but fan doesn't seem to be as efficient as usual	*Check the grease filter. If it has not been cleaned or be replaced recently , it might be clogged with grease. If filter is relatively clean, check charcoal filter. If this hasn't been replaced for more than six months, remove and insert a new one. As time goes by,accumulated grease tends to stifle the charcoal filter in just the same way as the grease filter, thereby reducing the efficiency of both the fan and the filter itself.*
Controls fail to switch motor on	*Check plug, socket and fuses. If these are in order and fault persists, it could be that an accumulation of grease has impaired the efficiency of the switch mechanism . Try rapidly moving switch on and off several times in succession to clear grease deposit. If fault continues, call service agent.*
Appliance does not work at all	*Check your cooker hood is switched on at the mains. Next, check for an unexpected power cut by switching on adjacent lights etc.*
Still not working? Call the service agent	*If, having consulted the above diagnostic chart you are still unable to remedy the situation, please call the Free -phone service telephone number at the rear of this booklet.*

Cleaning

It is recommended to clean the filters every three months following the instructions provided below:

- Remove the filters from the range hood and wash it with a neutral liquid detergent and water solution.
- For best oil, grease, grime, and stain removing effect, leave the filter soaked in the solution.
- Rinse thoroughly with clean water to remove any detergent residue.
- Metallic filters are dishwasher safe.
- Metallic filters may alter in colour after several washes. This is due to the natural oxidation properties of the material.

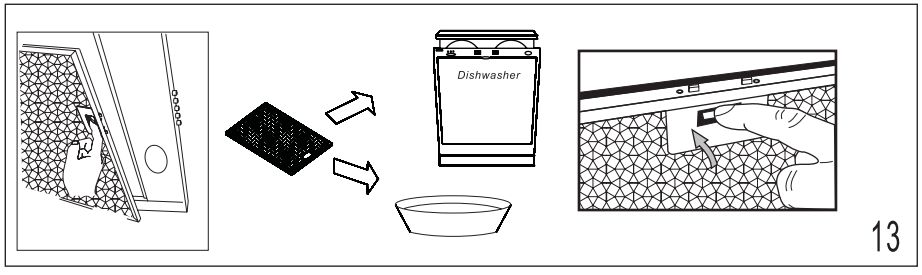

There may be a fire hazard if cleaning of the unit is not carried out in accordance with the instructions provided.

Please disconnect all power to the unit before cleaning or servicing.

Do not wash the range hood with water directly

Please clean and maintain the range hood periodically according to your usage and surrounding environment. This can help increase the lifespan of your range hood.

Replacing the spot light

CAUTION: HALOGEN LIGHT UNIT MAY BE HOT! WAIT UNTIL THE UNIT IS COOL.

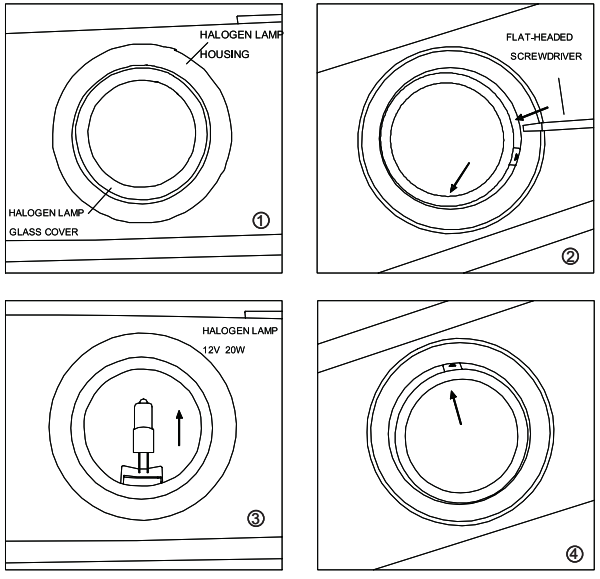

1. Make sure all controls are off and the range hood is unplugged.
2. Place a flat-headed screwdriver into the groove of the halogen light glass covering and the housing. ①
3. Pop out the halogen light glass covering. ②
4. Gently pull out the defective light bulb and discard. Light bulbs should be 12V 20W maximum. ③
5. Using a cloth, hold the new light bulb and push securely into light socket.
6. Return halogen light glass cover to the housing. ④
7. Turn range hood ON to test light.